



Installation

Refer to the installation manual for more information on how to perform the following steps.

Default installer password = 0129

Step 1. Mount the main system and battery box

Mount the system in a location where a telephone jack, a 120 volt AC power outlet, and proper grounding connections are readily available. Mount the enclosures on a solid structure.

Step 2. Wire the system

Install and connect all zone sensors, modules, and the siren.

Step 3. Connect the phone line

Make the proper phone connections and connect the phone line to the terminal on the phone card.

Step 4. Install and connect the battery and the battery temperature sensor

Install the battery and the temperature sensor and then power on the system.

Step 5. Select the language for the user interface

Once everything is mounted and wired, the system powers on automatically. Choose the language of your choice by clicking on the language icon on the main screen.

Step 6. Set the following parameters in the System menu using the touchscreen

- Time & Date
- Units of Measurement
- Contacts and contact groups
- Exit delay and entry delay for intruder zones
- Siren Options
- Outdoor T° Compensation
- Temperature curves

Step 7. Set the module identification numbers and add the modules

In the System menu, under Modules, enter the module identification numbers and add the modules.

Step 8. Configure your zones and add new zones as needed

Configure and add your zones one by one, making sure all the information required is completed.

Step 9. Test the system

Generate an alert to test communication with the contacts

Configuration

